

- 1. DESCRIPTION OF THE APPLIANCE**
- On/Off switch (0-1)
 - Unlock button
 - Wide Titanium blade hair clipper (32 mm)
 - Narrow Titanium blade hair clipper (32 mm)
 - Special nose and ear head with rotary cutting system
 - Recharging and storage base
 - Comb
 - Scissors
 - Clipping brush
 - Recharger
 - Quadrilateral "beard and moustache" guide / 7 positions, from 1,5mm to 14 mm
 - Special "hair" guide / 7 positions, from 4 to 16 mm

- 2. SAFETY INSTRUCTIONS**
- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
 - Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
 - The installation of the appliance and its use must however comply with the standards in force in your country.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - The appliance must be unplugged, before cleaning and maintenance procedures, if it is not working correctly, as soon as you have finished using it.
 - Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen
 - it does not work correctly.
 - Do not unplug by pulling on the cord, rather pull on the plug.
 - Do not use an electrical extension lead.
 - Do not clean with abrasive or corrosive products.
 - Do not use at temperatures below 10°C and above 35°C.
 - The appliance must only be used with the power pack supplied model 0094200020 - Input: 100-240V - 50/60 Hz - max. 2W; Output: 2.3V - 90 mA.
- WARNING:** The parts held in the hand must not be used before being cleaned with water. The water must not be hotter than 70°C. Suitable for use in the bathtub or under the shower.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

- 3. USING FOR THE FIRST TIME**
- Before use, make sure your appliance is charged. This appliance does not work in AC mode.
- Using in standalone mode (wiredless):**
- The device works with 1 battery.
 - To maximise the lifespan of the batteries:
 - Before using for the first time, charge the device up using the adapter for 14 hours. The first few times you use it, it is preferable to fully discharge your battery before recharging to ensure maximum autonomy.
 - A full charge takes 12 hours.
 - After turning the transformer off, the device has about 45 minutes of autonomy.

- Warning:** To avoid deterioration to the batteries:
- Never exceed more than 20h of charge
 - Do not charge the batteries too prematurely; only recharge them when the power of the appliance has decreased significantly or if it has not been used for more than 6 months

4. CUTTING GUIDES

- 2 multi length cutting guides:**
- Special "beard and moustache" guide (A): 7 positions, from 1,5mm to 14mm
 - Special "hair" guide (B): 7 positions, from 4mm to 16mm
- These cutting guides can only be used with the 32 mm blade.**

Assembly of the cutting guides:

Your device comes with the adjustable "special hair" guide (B) already on the clipper (length from 4mm to 16mm).

- To change the cutting guide:**
- Remove the guide in place by pulling upwards.
 - To place the "special beard" cutting guide (A), clip it onto the body of the appliance. Then choose your cutting position by pressing the button on the back of the guide. The cutting height is displayed in the window at the back of the guide, according to the following principle:

Setting	Length of hair obtained (mm)
1	1.5mm
2	3.5mm
3	5.5mm
4	7.5mm
5	9.5mm
6	11.5mm
7	14mm

To change position: push the guide desired number of notches by pressing the button on the back. The cutting height is displayed in the window at the back of the guide, according to the following principle:

Setting	Length of hair obtained (mm)
1	4mm
2	6mm
3	8mm
4	10mm
5	12mm
6	14mm
7	16mm

5. TIPS FOR USE

- a) To cut hair:**
- Place the "hair" cutting guide (B) on the 32 mm blade and slide it to the desired position. If you are using the clipper for the first time, begin with the highest height.
 - Turn the clipper on.
 - Make sure the cutting guide is always in contact with your head.
 - Move the clipper slowly in the opposite direction to the hair growth. Repeat as many times as necessary.
- b) To trim the beard and moustache:**
- Place the "beard" cutting guide (A) on the 32 mm blade and slide it to the desired position.
 - If you are using the clipper for the first time, begin with the highest height to get used to the device.
 - Turn the clipper on.
 - Move the clipper slowly in the opposite direction to the hair growth.
 - Repeat as many times as necessary.

4. GUÍAS DE CORTE

- 2 guías de corte de varias longitudes:**
- Guía especial "barba y bigote" (A): 7 posiciones, de 1,5mm a 14mm
 - Guía especial "cabello" (B): 7 posiciones, de 4mm a 16mm
- Estas guías de corte sólo se pueden utilizar con la cuchilla de 32 mm.**

Instalación de las guías de corte:

Su aparato se entrega con la guía ajustable "especial cabello" (B) situada en la maquinilla (largura de 4mm a 16mm).

- Para cambiar de guía de corte:**
- Retire la guía instalada en su posición de uso hacia arriba.
 - Para colocar la guía de corte "especial barba" (A), encajele en el cuerpo del aparato. Seleccione entonces su posición de corte pulsando el botón situado en el dorso de la guía. La altura de corte se visualiza en la ventana situada en el dorso de la guía, conforme al siguiente principio:

Ajuste	Longitud del cabello obtenida (mm)
1	1.5mm
2	3.5mm
3	5.5mm
4	7.5mm
5	9.5mm
6	11.5mm
7	14mm

Para cambiar de posición: desplace la guía el número de muescas que desea pulsar el botón situado en el dorso. La altura de corte se visualiza en la ventana situada en el dorso de la guía, conforme al siguiente principio:

Ajuste	Longitud del cabello obtenida (mm)
1	4mm
2	6mm
3	8mm
4	10mm
5	12mm
6	14mm
7	16mm

5. CONSEJOS DE USO

- a) Para cortar el cabello:**
- Coloque la guía de corte "cabello" (B) en la lámina de 32 mm y deslícela hasta la posición que desee. Si utiliza la maquinilla por primera vez, empiece por la altura más elevada.
 - Ponga en marcha el aparato.
 - Desplace lentamente la guía de corte se encuentra siempre en contacto con el cráneo.
 - Desplace lentamente la maquinilla, en el sentido contrario al crecimiento del pelo.
 - Repita la operación tantas veces como sea necesario.

b) Para recortar la barba y el bigote:

- Coloque la guía de corte "barba" (A) en la cuchilla de 32 mm y deslícela hasta la posición que desee.
- Si utiliza la maquinilla por primera vez, empiece por la altura más elevada para irse familiarizando con el aparato.
- Ponga en marcha el aparato.
- Desplace lentamente la maquinilla en el sentido contrario al crecimiento del pelo.
- Repita la operación tantas veces como sea necesario.

Atención: para evitar la alteración de los acumuladores:

- No supere nunca las 20h de carga.
- No cargue los acumuladores con demasiada premura: cúrguelos sólo cuando la potencia del aparato esté claramente baja o si el aparato no se ha utilizado durante más de 6 meses.

- c) To style the beard, moustache and sideburns:**
- Remove the clipper head by pressing the unlock button.
 - Attach the 20 mm clipper blade.
 - When you use this accessory, be sure to keep the clipper upright.

d) To cut nose, ear and eyebrow hairs:

- Attach the nose and ear clipper blade.
- Introduce the head of the clipper carefully into the nostril or the ear. Then gently turn the clipper in a circular motion.
- Do not introduce the cutting unit more than 6 mm inside the nostril or the ear. For eyebrows, use the tip of the accessory to cut unruly hairs.
- Do not use the device to cut or style eyebrows.
- Hold the clipper away from your face.

6. LUBRICATION OF THE BLADES (32 AND 20 MM)

To ensure your clipper always remains effective, it is essential that the cutting blades be lubricated before each use with the lubricant supplied or, failing this, with sewing machine oil.

- Before lubrication, unplug the appliance and remove any hairs that are stuck between the cutting blades of the clippers using the small brush.
- Lubricate the blades where indicated: one drop per location is enough.
- Operate the clipper for a few seconds.
- Clean the excess oil with a rag.

7. MAINTENANCE, CLEANING AND STORAGE

The clipper requires very little maintenance. You can clean it with a damp cloth.

Washing the clipper and the different heads:

- Place the on/off switch on stop.
- Remove the cutting guide and/or any other accessory.
- Remove the hair using the brush.

Storage: Store the device and accessories on their base.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

 

 

 
 
 

 
 
 
 
 
 


 
 
Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

Recycling the batteries:

After removing the NiMH batteries, discharge them completely. Open the battery compartment using a tool, cut all the connections and then recycle the batteries in a safe manner.

Environment Protection First!

Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

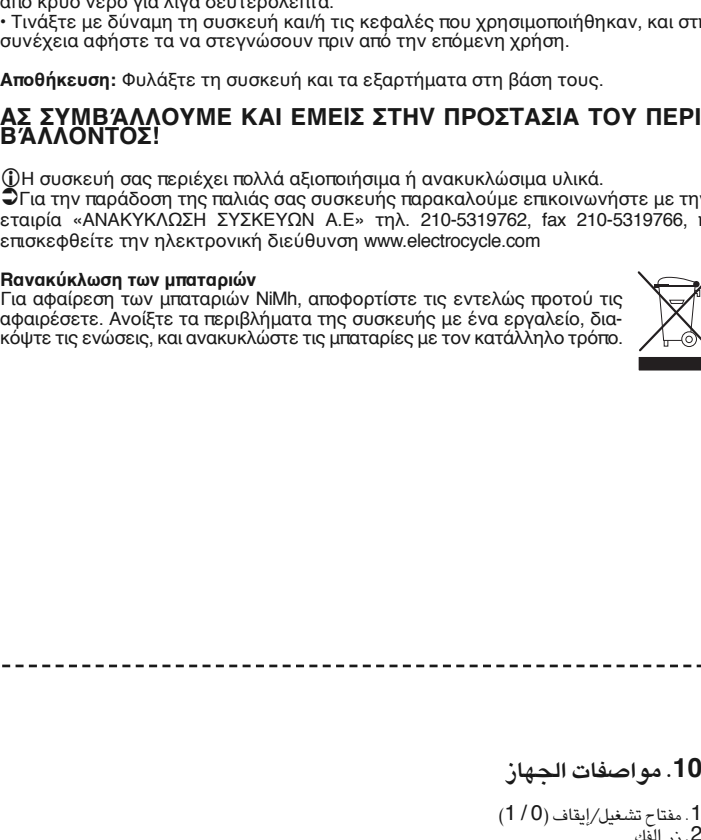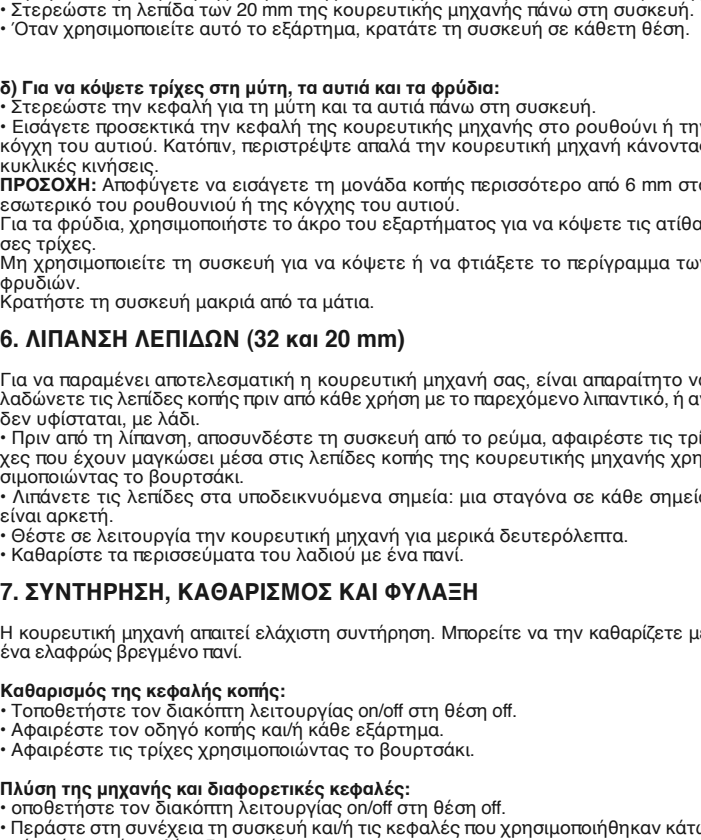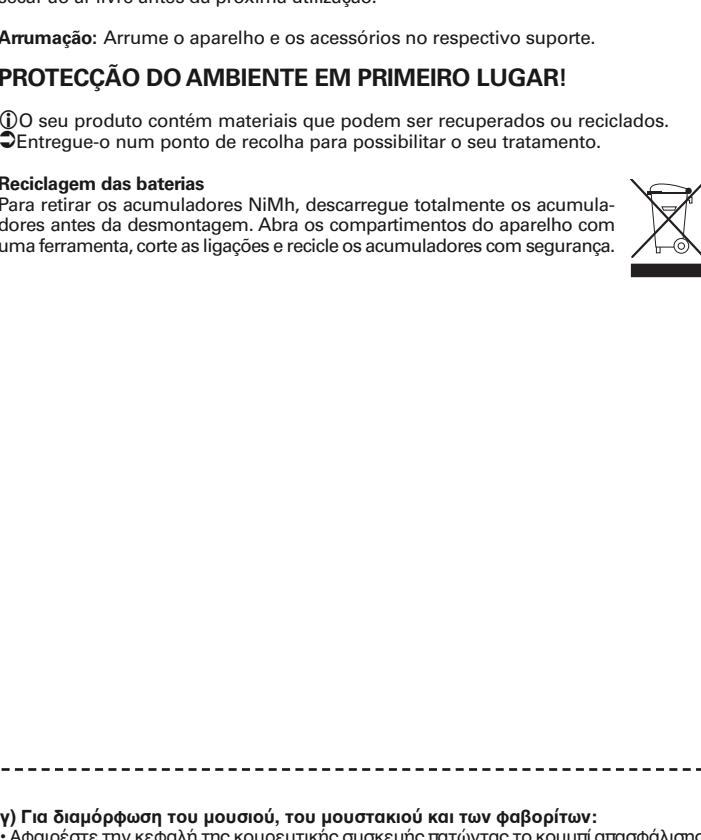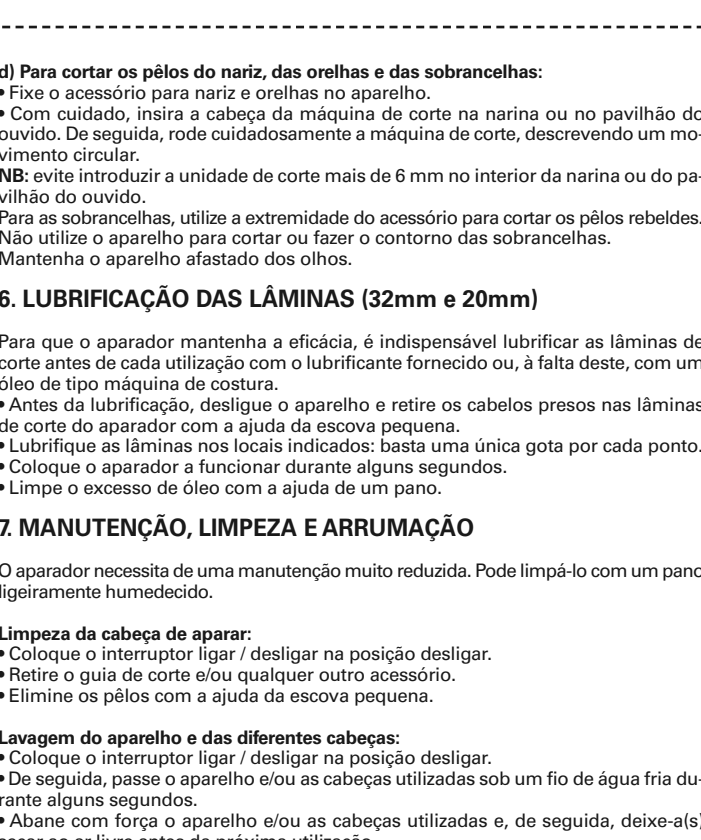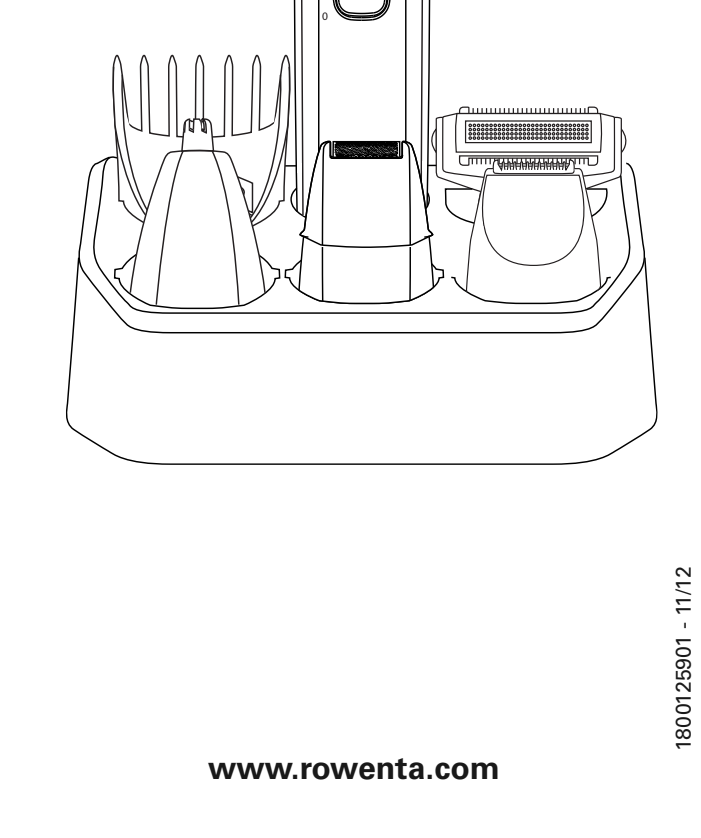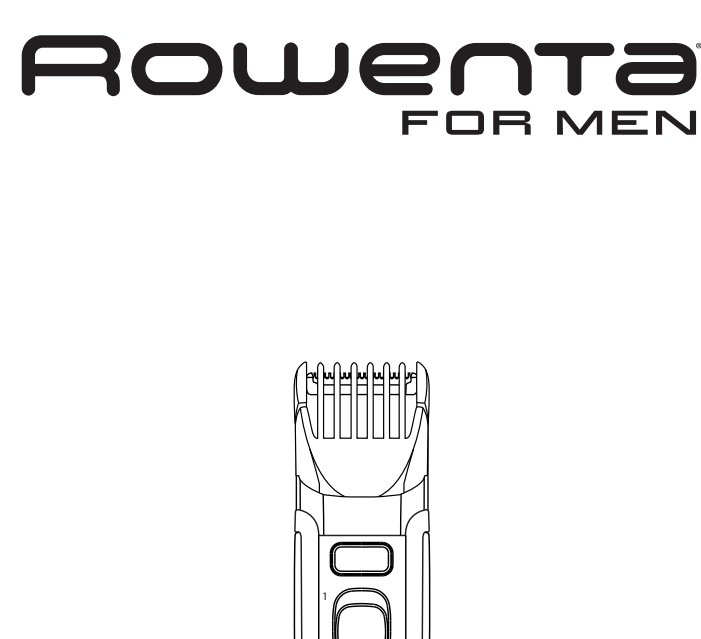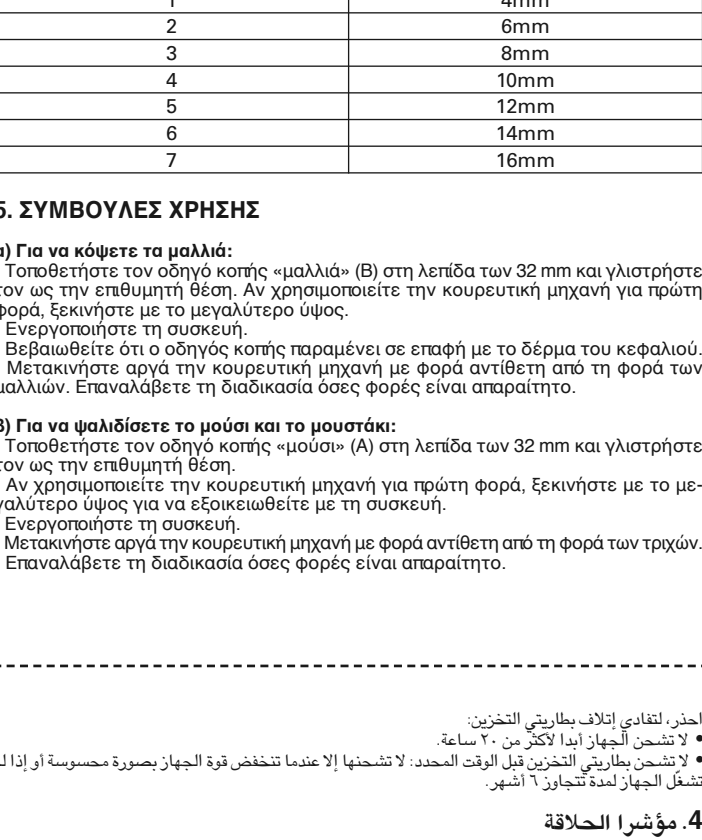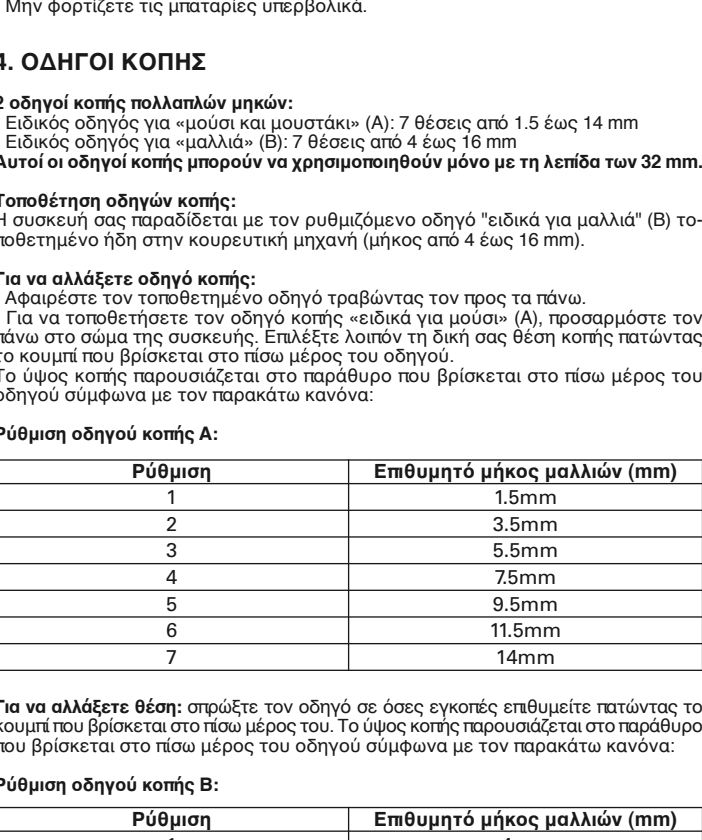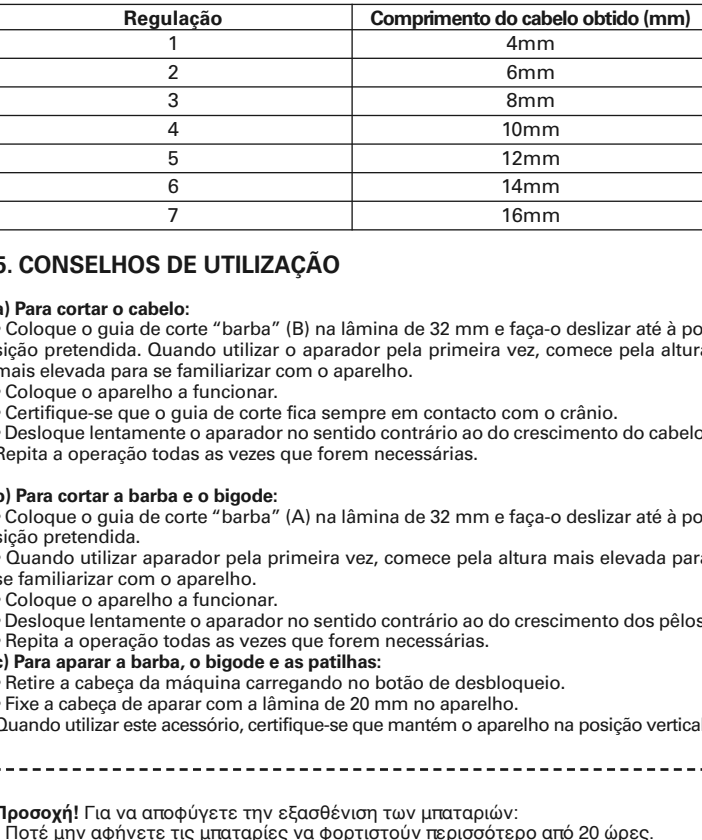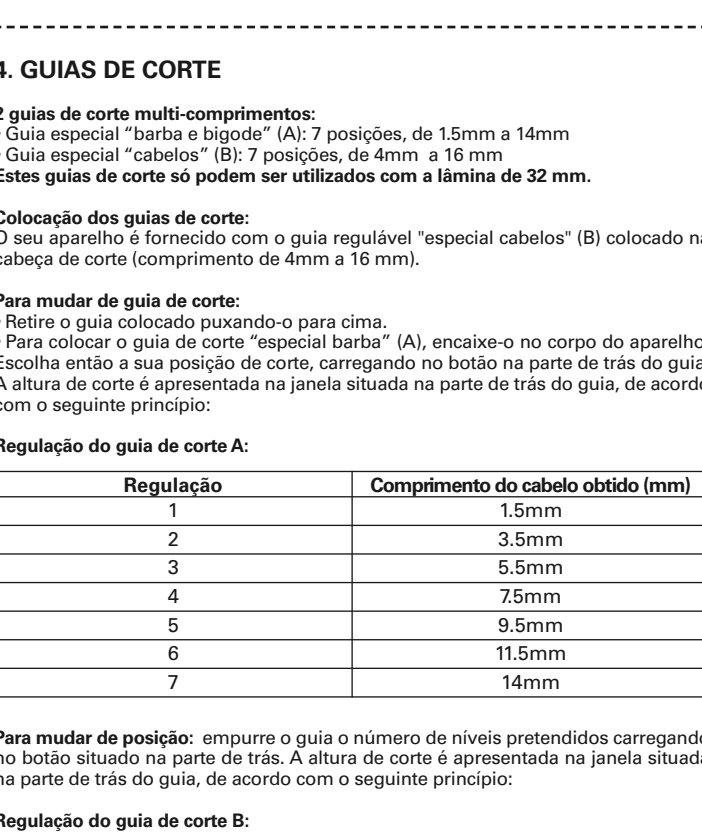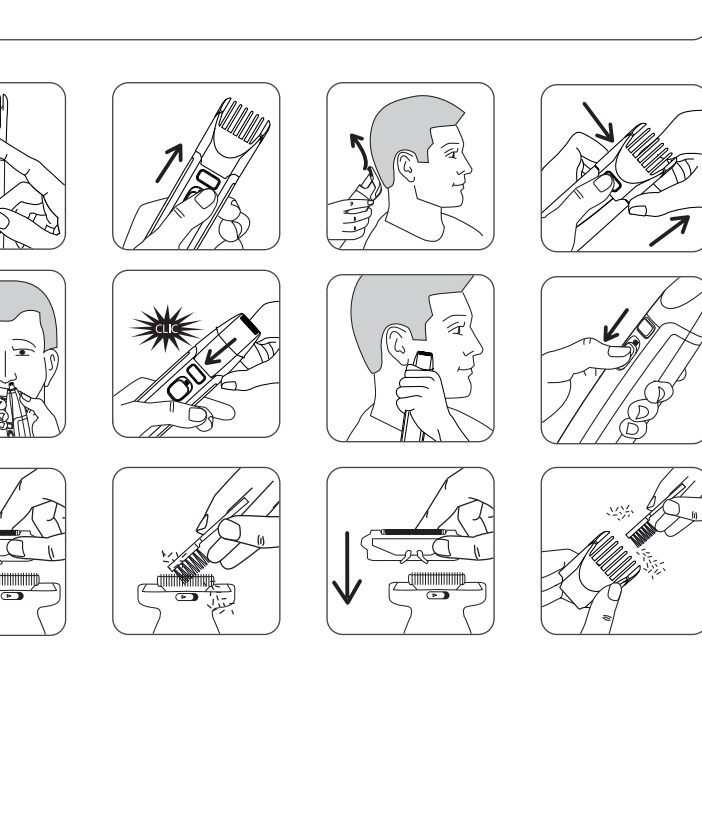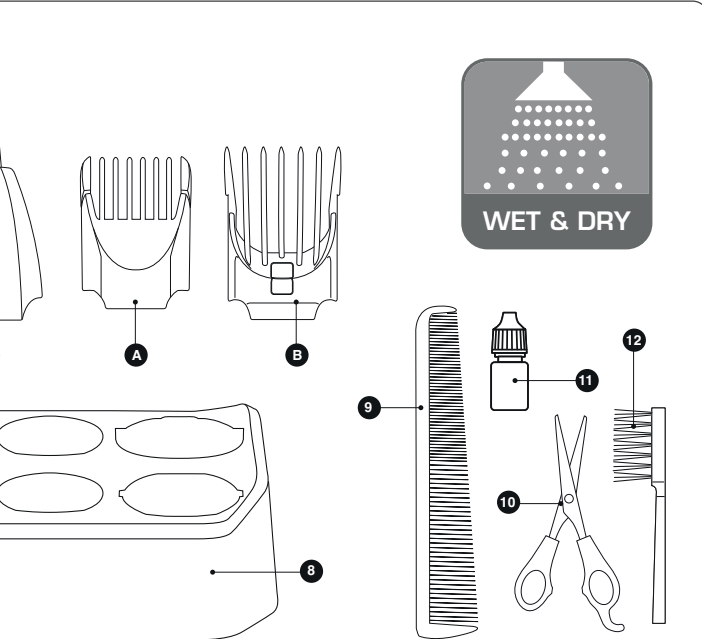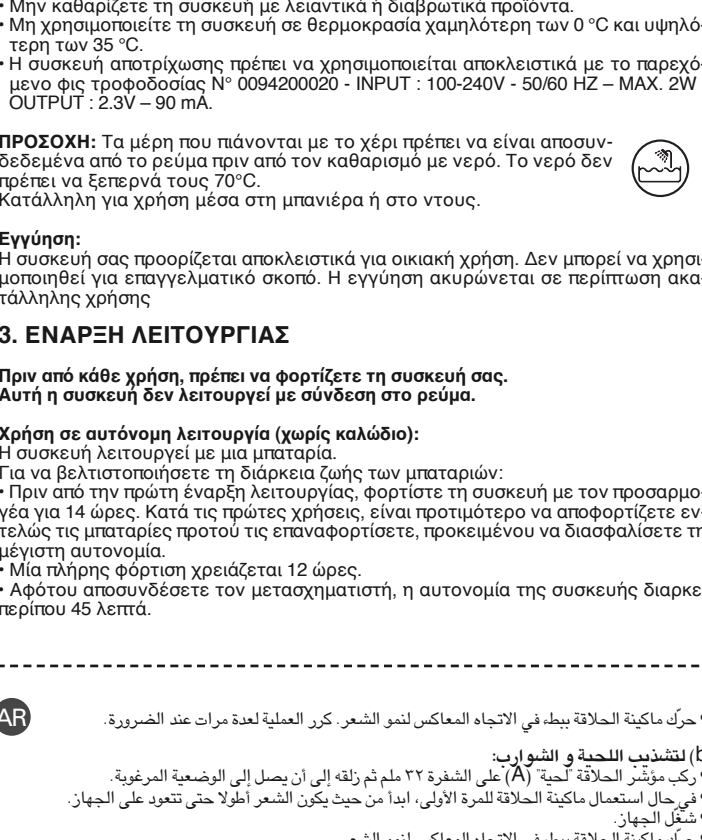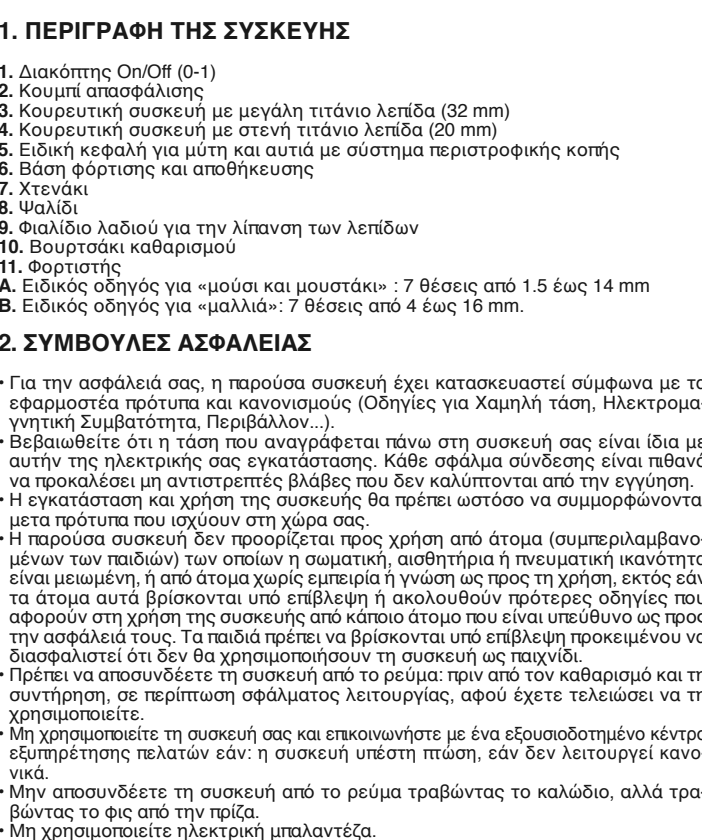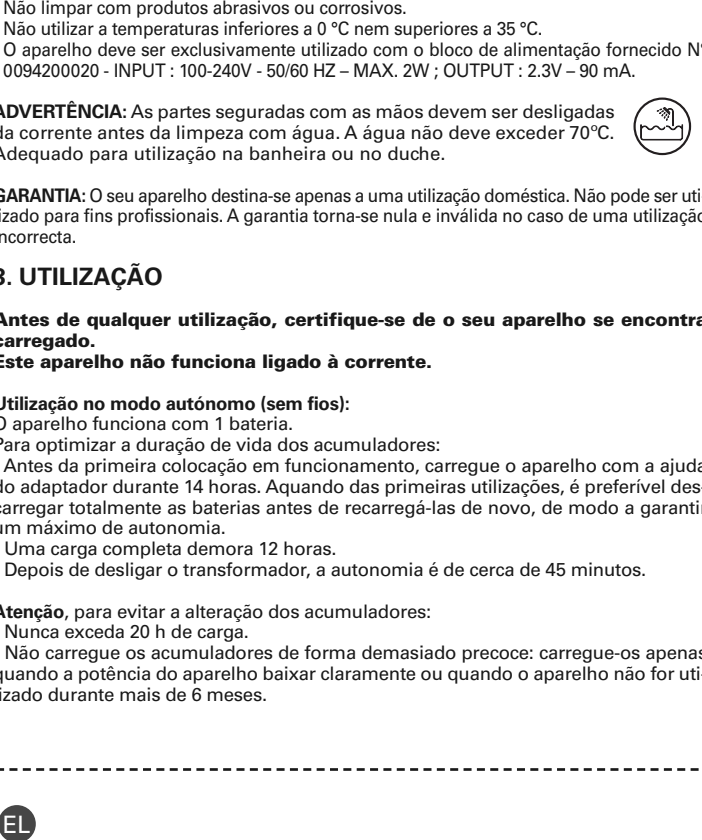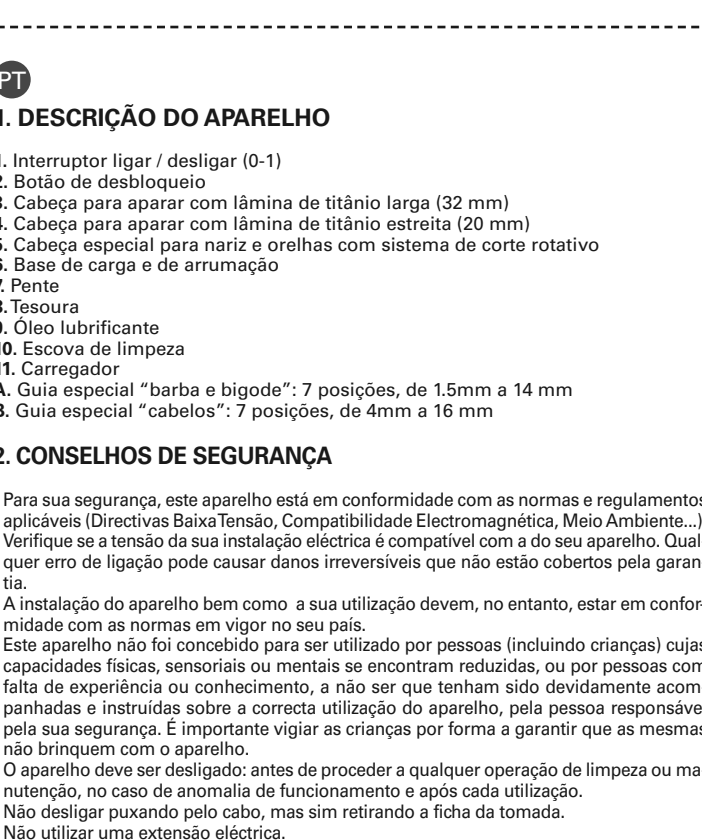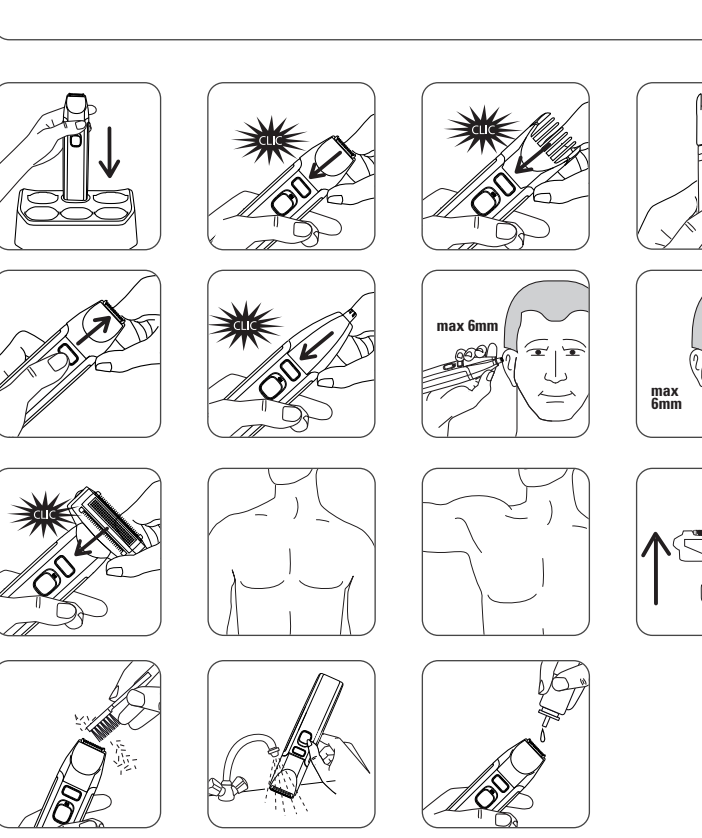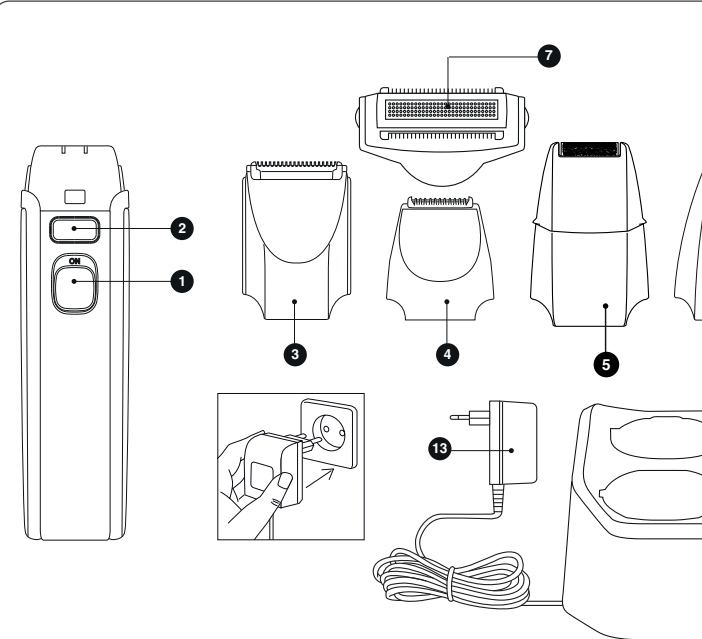

www.rowenta.com

1. DESCRIPCIÓN DEL APARATO

- Interruptor de encendido/apagado (0-1)
- Botón de desbloqueo
- Cabezal con cuchilla ancha de Titanio (32 mm)
- Cabezal con cuchilla de estrecha Titanio (20 mm)
- Cabezal especial para nariz e orejas con sistema de corte rotativo
- Base de carga y de recarga
- Pinta
- Tijeras
- Acendedor
- Capítulo de limpieza
- Recharger
- Guía especial "barba y bigote" (A): 7 posiciones, de 1,5mm a 14 mm
- Guía especial "cabello" (B): 7 posiciones, de 4mm a 16 mm

2. INSTRUCCIONES DE SEGURIDAD

- Por su seguridad, este aparato cumple las normas y disposiciones aplicables (Directivas de Baja Tensión, Compatibilidad Electromagnética, Medio Ambiente...).
 - Asegúrese de que la tensión de la instalación eléctrica se corresponde con la de su aparato. Cualquier error de conexión puede causar daños irreversibles que no cubre la garantía.
 - La instalación del aparato y su uso debe cumplir no obstante las normas en vigor en su país.
 - Este aparato no está diseñado para ser utilizado por personas (incluyendo los niños) cuyas capacidades físicas, sensoriales o mentales sean reducidas, o por personas carentes de experiencia o de conocimiento, salvo si éstas han contado por medio de persona responsable de su seguridad, con una vigilancia o con instrucciones previas relativas al uso del aparato. Se recomienda vigilar a los niños para asegurarse de que no juegan con el aparato.
 - El aparato debe desconectarse antes de su limpieza y mantenimiento, en caso de anomalías en su funcionamiento, una vez que haya terminado de utilizarlo.
 - No utilice el aparato y contacte con un Centro de Servicio Autorizado:
 - si su aparato ha caído al suelo
 - si no funciona normalmente.
 - No lo deslice tirando del cable, sino tirando del enchufe.
 - No utilice ningún alargador eléctrico.
 - No lo utilice con productos abrasivos o corrosivos.
 - No lo utilice con una temperatura inferior a 0°C ni superior a 35°C.
 - La fuente de alimentación debe utilizarse exclusivamente con el bloque de alimentación incluido N° 0094200020 - INPUT: 100-240V - 50/60 Hz - MAX. 2W; OUTPUT: 2.3V - 90 mA.
- ADVERTENCIA:** Las partes que se manejan con la mano deberán desconectarse antes de la limpieza con agua. La temperatura del agua no debe exceder los 70°C. Puede utilizarse en la bañera o la ducha.

GARANTÍA: Su aparato está destinado únicamente a un uso doméstico. No puede utilizarse con fines profesionales. La garantía quedará anulada y dejará de ser válida en caso de un uso incorrecto.

3. FUNCIONAMIENTO

Antes de cualquier uso, procure recargar el aparato. Este aparato no funciona con corriente.

Uso en modo autónomo (sin cable):

